### Product data sheet Characteristics

### ATV71HU75M3 variable speed drive ATV71 - 7.5kW-10HP -240V - EMC filter-graphic terminal



Product availability:	Stock -	Normally stocked in distribution facili	ty
-----------------------	---------	---	----

Main	
Range of product	Altivar 71
Product or component type	Variable speed drive
Product specific applica- tion	Complex, high-power machines
Component name	ATV71
Motor power kW	7.5 KW, 3 phase 200240 V 5.5 kW, single phase 200240 V
Maximum Horse Power Rating	10 Hp, 3 phase 200240 V 7.5 hp, single phase 200240 V
Maximum motor cable length	164.04 Ft (50 m) shielded cable 328.08 ft (100 m) unshielded cable
Power supply voltage	200240 V - 1510 %
Phase	3 phase Single phase
Line current	39.4 A 240 V 3 phase 7.5 kW / 10 hp 40.1 A 240 V single phase 5.5 kW / 7.5 hp 45 A 200 V 3 phase 7.5 kW / 10 hp 47.3 A 200 V single phase 5.5 kW / 7.5 hp
EMC filter	Integrated
Assembly style	With heat sink
Apparent power	9.5 KVA 240 V single phase 5.5 kW / 7.5 hp 16.4 kVA 240 V 3 phase 7.5 kW / 10 hp
Prospective line Isc	22 KA 3 phase 22 kA single phase
Nominal output current	27.5 A 4 kHz 230 V single phase 5.5 kW / 7.5 hp 33 A 4 kHz 230 V 3 phase 7.5 kW / 10 hp
Maximum transient cur- rent	41.3 A 60 s single phase 5.5 kW / 7.5 hp 45.3 A 2 s single phase 5.5 kW / 7.5 hp 49.5 A 60 s 3 phase 7.5 kW / 10 hp 54.5 A 2 s 3 phase 7.5 kW / 10 hp
Output frequency	0.1599 Hz
Nominal switching fre- quency	4 kHz
Switching frequency	116 kHz adjustable 416 kHz with derating factor
Asynchronous motor control profile	Flux vector control (FVC) with sensor (current vec- tor) ENA (Energy adaptation) system for unbalanced loads Voltage/Frequency ratio (2 or 5 points) Sensorless flux vector control (SFVC) (voltage or current vector)
Type of polarization	No impedance Modbus

### Complementary

Synchronous motors Asynchronous motors			
170264 V			
5060 Hz - 55 %			
47.563 Hz			
1100 asynchronous motor in open-loop mode, without speed feedback 11000 asynchronous motor in closed-loop mode with encoder feedback 150 synchronous motor in open-loop mode, without speed feedback			
+/- 0.01 % of nominal speed in closed-loop mode with encoder feedback 0.2 Tn to Tn +/- 10 % of nominal slip without speed feedback 0.2 Tn to Tn			
+/- 15 % in open-loop mode, without speed feedback +/- 5 % in closed-loop mode with encoder feedback			
170 % +/- 10 % 60 s every 10 minutes 220 % +/- 10 % 2 s			
<= 150 % with braking or hoist resistor 30 % without braking resistor			
Vector control without speed feedback			
Adjustable PI regulator			
Not available in voltage/frequency ratio (2 or 5 points) Automatic whatever the load Suppressable Adjustable			
Drive voltage 1 LED red)			
<= power supply voltage			
Electrical between power and control			
With a NEMA Type1 kit 3 UL 508 cable 104 °F (40 °C), copper 75 °C / PV0 With an IP21 or an IP31 kit 3 IEC cable 104 °F (40 °C), copper 70 °C / PV0 Without mounting kit 1 IEC cable 113 °F (45 °C), copper 70 °C / PVC Without mounting kit 1 IEC cable 113 °F (45 °C), copper 90 °C / XLPE/EPI			
Terminal 2.5 mm², AWG 14 Al1-/Al1+, Al2, AO1, R1A, R1B, R1C, R2A, R2B, Ll1Ll6, PWR) Terminal 16 mm², AWG 4 L1/R, L2/S, L3/T, U/T1, V/T2, W/T3, PC/-, PO, PA/+, PA, PB)			
5.31 Lbf.In (0.6 N.m) Al1-/Al1+, Al2, AO1, R1A, R1B, R1C, R2A, R2B, Ll1Ll6, PWR) 26.55 lbf.in (3 N.m), 26.5 lb.in L1/R, L2/S, L3/T, U/T1, V/T2, W/T3, PC/-, PO, PA/ +, PA, PB)			
Internal supply for reference potentiometer (1 to 10 kOhm) 10.5 V DC +/- 5 %, <10 mA overload and short-circuit protection Internal supply 24 V DC 2127 V), <200 mA overload and short-circuit protection			
2			
AI1-/AI1+ bipolar differential voltage +/- 10 V DC 24 V max 11 bits + sign AI2 software-configurable current 020 mA 242 Ohm 11 bits AI2 software-configurable voltage 010 V DC 24 V max 30000 Ohm 11 bits			
2 Ms +/- 0.5 ms Al1-/Al1+) - analog 2 Ms +/- 0.5 ms Al2) - analog 2 Ms +/- 0.5 ms Ll1Ll5) - discrete 2 ms +/- 0.5 ms Ll6)if configured as logic input - discrete			
<= 100 ms in STO (Safe Torque Off) AO1 2 ms +/- 0.5 ms analog R1A, R1B, R1C 7 ms +/- 0.5 ms discrete R2A, R2B 7 ms +/- 0.5 ms discrete			
+/- 0.6 % Al1-/Al1+) for a temperature variation 60 °C +/- 0.6 % Al2) for a temperature variation 60 °C +/- 1 % AO1) for a temperature variation 60 °C			
+/- 0.15 % of maximum value Al1-/Al1+, Al2) +/- 0.2 % AO1)			
1			
AO1 software-configurable logic output 10 V 20 mA AO1 software-configurable current 020 mA 500 Ohm 10 bits AO1 software-configurable voltage 010 V DC 470 Ohm 10 bits			
2			
Configurable relay logic R1A, R1B, R1C) NO/NC - 100000 cycles Configurable relay logic R2A, R2B) NO - 100000 cycles			

Minimum switching current	3 mA 24 V DC configurable relay logic
Maximum switching current	R1, R2 2 A 250 V AC inductive, cos phi = 0.4 R1, R2 2 A 30 V DC inductive, cos phi = 0.4 R1, R2 5 A 250 V AC resistive, cos phi = 1 R1, R2 5 A 30 V DC resistive, cos phi = 1
Discrete input number	7
Discrete input type	LI1LI5 programmable 24 V DC level 1 PLC 3500 Ohm LI6 switch-configurable 24 V DC level 1 PLC 3500 Ohm LI6 switch-configurable PTC probe 06 1500 Ohm PWR safety input 24 V DC 1500 Ohm ISO 13849-1 level d
Discrete input logic	Negative logic (sink) Ll1Ll5), > 16 V, < 10 V Positive logic (source) Ll1Ll5), < 5 V, > 11 V Negative logic (sink) Ll6)if configured as logic input, > 16 V, < 10 V Positive logic (source) Ll6)if configured as logic input, < 5 V, > 11 V
Acceleration and deceleration ramps	Automatic adaptation of ramp if braking capacity exceeded, by using resistor S, U or customized Linear adjustable separately from 0.01 to 9000 s
Braking to standstill	By DC injection
Protection type	Against exceeding limit speed drive Against input phase loss drive Break on the control circuit drive Input phase breaks drive Line supply overvoltage drive Line supply undervoltage drive Overcurrent between output phases and earth drive Overchaating protection drive Overvoltages on the DC bus drive Short-circuit between motor phases drive Thermal protection drive Motor phase break motor Power removal motor Thermal protection motor
Insulation resistance	> 1 mOhm 500 V DC for 1 minute to earth
Frequency resolution	Analog input 0.024/50 Hz Display unit 0.1 Hz
Communication port protocol	CANopen Modbus
Connector type	1 RJ45 on front face)Modbus 1 RJ45 on terminal)Modbus Male SUB-D 9 on RJ45CANopen
Physical interface	2-wire RS 485 Modbus
Transmission frame	RTU Modbus
Transmission rate	4800 bps, 9600 bps, 19200 bps, 38.4 Kbps Modbus on terminal 9600 bps, 19200 bps Modbus on front face 20 kbps, 50 kbps, 125 kbps, 250 kbps, 500 kbps, 1 Mbps CANopen
Data format	8 bits, 1 stop, even parity Modbus on front face 8 bits, odd even or no configurable parity Modbus on terminal
Number of addresses	1127 CANopen 1247 Modbus
Method of access	Slave CANopen
Marking	CE
Operating position	Vertical +/- 10 degree
Operating position	
	11.61 in (295 mm)
Height	
Height Depth	11.61 in (295 mm)
Height Depth Width Net weight	11.61 in (295 mm) 8.39 in (213 mm)

Specific application	Other applications		
Option card	Communication card CC-Link		
	Controller inside programmable card		
	Communication card DeviceNet		
	Communication card Ethernet/IP		
	Communication card Fipio		
	I/O extension card		
	Communication card Interbus-S		
	Interface card for encoder		
	Communication card Modbus Plus		
	Communication card Modbus TCP		
	Communication card Modbus/Uni-Telway		
	Overhead crane card		
	Communication card Profibus DP		
	Communication card Profibus DP V1		

#### Environment

Noise level	57.4 dB 86/188/EEC
Dielectric strength	2830 V DC between earth and power terminals 4230 V DC between control and power terminals
Electromagnetic compatibility	<ul> <li>1.2/50 μs - 8/20 μs surge immunity test level 3 IEC 61000-4-5 Conducted radio-frequency immunity test level 3 IEC 61000-4-6 Electrical fast transient/burst immunity test level 4 IEC 61000-4-4 Electrostatic discharge immunity test level 3 IEC 61000-4-2 Radiated radio-frequency electromagnetic field immunity test level 3 IEC 61000-4-3 Voltage dips and interruptions immunity test IEC 61000-4-11</li> </ul>
Standards	EN/IEC 61800-5-1 EN 61800-3 environments 1 category C3 EN 61800-3 environments 2 category C3 UL Type 1 EN/IEC 61800-3 EN 55011 class A group 2 IEC 60721-3-3 class 3C1 IEC 60721-3-3 class 3S2
Product certifications	CSA GOST UL C-Tick NOM 117
Pollution degree	2 EN/IEC 61800-5-1
IP degree of protection	IP20
Vibration resistance	1 gn 13200 Hz)EN/IEC 60068-2-6 1.5 mm peak to peak 313 Hz)EN/IEC 60068-2-6
Shock resistance	15 gn 11 ms EN/IEC 60068-2-27
Relative humidity	595 % without condensation IEC 60068-2-3 595 % without dripping water IEC 60068-2-3
Ambient air temperature for operation	14…122 °F (-10…50 °C) without)
Ambient air temperature for storage	-13158 °F (-2570 °C)
Operating altitude	<= 3280.84 ft (1000 m) without 3280.849842.52 ft (10003000 m) with current derating 1 % per 100 m

### Ordering and shipping details

Category	22131 - ATV71 - 7.5 THRU 50HP		
Discount Schedule	CP4C		
GTIN	00785901933038		
Package weight(Lbs)	10.24 kg (22.58 lb(US))		
Returnability	No		
Country of origin	ID		

Green Premium product
WARNING: This product can expose you to chemicals including: Lead and lead compounds which is known to the State of California to cause Carcinogen & Reproductive harm. For more information go to www.p65warnings.ca.gov
REACh Declaration
Pro-active compliance (Product out of EU RoHS legal scope) CEU RoHS Decla- ration
Yes
<b>⊡</b> Yes
China RoHS Declaration
Product Environmental Profile
Pend Of Life Information
The product must be disposed on European Union markets following specific waste collection and never end up in rubbish bins.


# Contractual warranty Warranty

18 months

### ATV71HU75M3

### UL Type 1/IP 20 Drives


#### **Dimensions without Option Card**

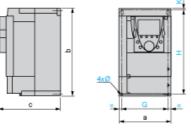

#### Dimensions in mm

а	b	с	G	Н	к	Ø
210	295	213	190	283	6	6
Dimensions in in.						
а	b	С	G	Н	к	Ø
8.26	11.61	8.38	7.48	11.14	0.23	0.23

### Dimensions with 1 Option Card (1)

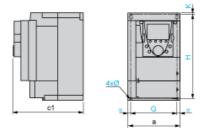

#### Dimensions in mm


а	c1	G	н	к	Ø
210	236	190	283	6	6


#### Dimensions in in.

а	c1	G	Н	к	Ø
8.26	9.29	7.48	11.14	0.23	0.23

(1) Option cards: I/O extension cards, communication cards or "Controller Inside" programmable card.

#### Dimensions with 2 Option Cards (1)

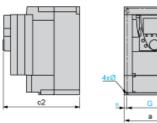

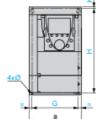

#### Dimensions in mm

а	c2	G	Н	К	Ø
210	259	190	283	6	6

Dimensions in in.

а	c2	G	Н	к	Ø
8.26	10.20	7.48	11.14	0.23	0.23

(1) Option cards: I/O extension cards, communication cards or "Controller Inside" programmable card.

# ATV71HU75M3


#### Mounting Recommendations

Depending on the conditions in which the drive is to be used, its installation will require certain precautions and the use of appropriate accessories.


Install the unit vertically:

- Avoid placing it close to heating elements
- Leave sufficient free space to ensure that the air required for cooling purposes can circulate from the bottom to the top of the unit.


#### Clearance

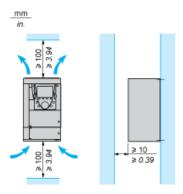


#### Mounting Types

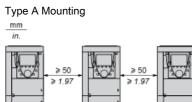

Type B Mounting

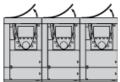

Type C Mounting

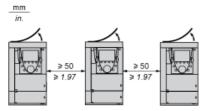


By removing the protective blanking cover from the top of the drive, the degree of protection for the drive becomes IP 20. The protective blanking cover may vary according to the drive model (refer to the user guide). The protective blanking cover must be removed from ATV 71P•••N4Z drives when they are mounted in a dust and damp proof enclosure.

#### Specific Recommendations for Mounting the Drive in an Enclosure

#### Ventilation

To ensure proper air circulation in the drive:

- Fit ventilation grilles.
- Ensure that there is sufficient ventilation. If there is not, install a forced ventilation unit with a filter. The openings and/or fans must provide a flow rate at least equal to that of the drive fans (refer to the product characteristics).

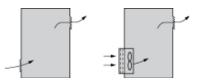

- Use special filters with IP 54 protection.
- Remove the blanking cover from the top of the drive.

#### Dust and Damp Proof Metal Enclosure (IP 54)


The drive must be mounted in a dust and damp proof enclosure in certain environmental conditions: dust, corrosive gases, high humidity with risk of condensation and dripping water, splashing liquid, etc.

This enables the drive to be used in an enclosure where the maximum internal temperature reaches 50°C.

## ATV71HU75M3

Wiring Diagram Conforming to Standards EN 954-1 Category 1, IEC/EN 61508 Capacity SIL1, in Stopping Category 0 According to IEC/EN 60204-1

#### Three-Phase Power Supply with Upstream Breaking via Contactor

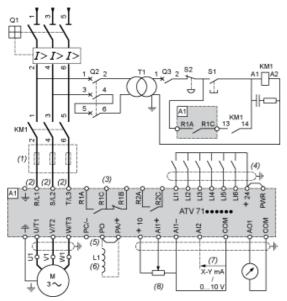


- A1 ATV71 drive
- KM1 Contactor
- L1 DC choke
- Q1 Circuit-breaker
- Q2 GV2 L rated at twice the nominal primary current of T1
- Q3 GB2CB05
- S1, XB4 B or XB5 A pushbuttons
- S2
- T1 100 VA transformer 220 V secondary
- (1) Line choke (three-phase); mandatory for ATV71HC11Y...HC63Y drives (except when a special transformer is used (12-pulse)).
- (2) For ATV71HC40N4 drives combined with a 400 kW motor, ATV71HC50N4 and ATV71HC40Y...HC63Y, refer to the power terminal connections diagram.
- (3) Fault relay contacts. Used for remote signalling of the drive status.
- (4) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).
- (5) There is no PO terminal on ATV71HC11Y...HC63Y drives.
- (6) Optional DC choke for ATV71H•••M3, ATV71HD11M3X...HD45M3X, ATV71•075N4...•D75N4 and ATV71P•••N4Z drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV71HD55M3X, HD75M3X, ATV71HD90N4...HC50N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it.
- (7) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.
- (8) Reference potentiometer.

All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

Wiring Diagram Conforming to Standards EN 954-1 Category 1, IEC/EN 61508 Capacity SIL1, in Stopping Category 0 According to IEC/EN 60204-1

#### Power Section for Single-Phase Power Supply

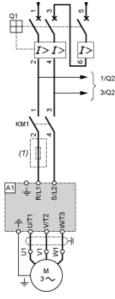


#### A1 ATV71 drive

- KM1 Contactor Q1 Circuit-breaker
- Q2 GV2 L rated at twice the nominal primary current of T1

(1) Line Choke (single-phase); mandatory for ATV71HU40M3...HU75M3 drives with a 200...240 V 50/60 Hz single-phase power supply. All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

# Wiring Diagram Conforming to Standards EN 954-1 Category 1, IEC/EN 61508 Capacity SIL1, in Stopping Category 0 According to IEC/EN 60204-1

#### Three-Phase Power Supply with Downstream Breaking via Switch Disconnector

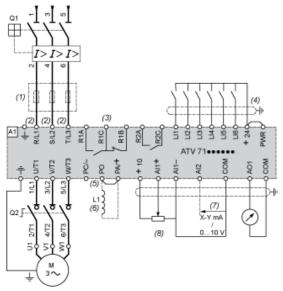


- A1 ATV71 drive
- L1 DC choke
- Q1 Circuit-breaker
- Q2 Switch disconnector (Vario)
- (1) Line choke (three-phase), mandatory for ATV71HC11Y...HC63Y drives (except when a special transformer is used (12-pulse)).
- (2) For ATV71HC40N4 drives combined with a 400 kW motor, ATV71HC50N4 and ATV71HC40Y...HC63Y, refer to the power terminal connections diagram.
- (3) Fault relay contacts. Used for remote signalling of the drive status.
- (4) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).
- (5) There is no PO terminal on ATV71HC11Y...HC63Y drives.
- (6) Optional DC choke for ATV71H•••M3, ATV71HD11M3X...HD45M3X, ATV71•075N4...•D75N4 and ATV71P•••N4Z drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV71HD55M3X, HD75M3X, ATV71HD90N4...HC50N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it.
- (7) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.
- (8) Reference potentiometer.

All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

# Wiring Diagram Conforming to Standards EN 954-1 Category 1, IEC/EN 61508 Capacity SIL1, in Stopping Category 0 According to IEC/EN 60204-1

Power Section for Single-Phase Power Supply

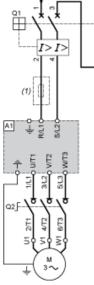


- A1 ATV71 drive
- Q1 Circuit-breaker
- Q2 Switch disconnector (Vario)

(1) Line Choke (single-phase); mandatory for ATV71HU40M3...HU75M3 drives with a 200...240 V 50/60 Hz single-phase power supply. All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

Wiring Diagram Conforming to Standards EN 954-1 Category 3, IEC/EN 61508 Capacity SIL2, in Stopping Category 0 According to IEC/EN 60204-1

#### Three-Phase Power Supply, Low Inertia Machine, Vertical Movement

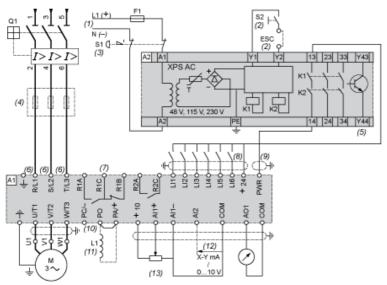


#### A1 ATV71 drive

- A2 Preventa XPS AC safety module for monitoring emergency stops and switches. One safety module can manage the "Power Removal" function for several drives on the same machine. In this case, each drive must connect its PWR terminal to its + 24 V via the safety contacts on the XPS AC module. These contacts are independent for each drive.
- F1 Fuse
- L1 DC choke
- Q1 Circuit-breaker
- S1 Emergency stop button with 2 contacts
- S2 XB4 B or XB5 A pushbutton
- (1) Power supply: 24 Vdc or Vac, 48 Vac, 115 Vac, 230 Vac.
- (2) S2: resets XPS AC module on power-up or after an emergency stop. ESC can be used to set external starting conditions.
- (3) Requests freewheel stopping of the movement and activates the "Power Removal" safety function.
- (4) Line choke (three-phase), mandatory for and ATV71HC11Y...HC63Y drives (except when a special transformer is used (12-pulse)).
- (5) The logic output can be used to signal that the machine is in a safe stop state.
- (6) For ATV71HC40N4 drives combined with a 400 kW motor, ATV71HC50N4 and ATV71HC40Y...HC63Y, refer to the power terminal connections diagram.
- (7) Fault relay contacts. Used for remote signalling of the drive status.
- (8) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).
- (9) Standardized coaxial cable, type RG174/U according to MIL-C17 or KX3B according to NF C 93-550, external diameter
- 2.54 mm /0.09 in., maximum length 15 m / 49.21 ft. The cable shielding must be earthed.(10) There is no PO terminal on ATV71HC11Y...HC63Y drives.
- (11) Optional DC choke for ATV71H•••M3, ATV71HD11M3X...HD45M3X, ATV71•075N4...•D75N4 and ATV71P•••N4Z drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV71HD55M3X, HD75M3X, ATV71HD90N4...HC50N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it.
- (12) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.
- (13) Reference potentiometer.

All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

# Wiring Diagram Conforming to Standards EN 954-1 Category 3, IEC/EN 61508 Capacity SIL2, in Stopping Category 0 According to IEC/EN 60204-1

#### Power Section for Single-Phase Power Supply

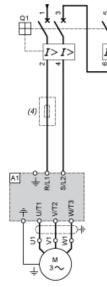


A1 ATV71 drive

Q1 Circuit-breaker

(4) Line Choke (single-phase); mandatory for ATV71HU40M3...HU75M3 drives with a 200...240 V 50/60 Hz single-phase power supply. All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

Wiring Diagram Conforming to Standards EN 954-1 Category 3, IEC/EN 61508 Capacity SIL2, in Stopping Category 1 According to IEC/EN 60204-1

#### Three-Phase Power Supply, High Inertia Machine

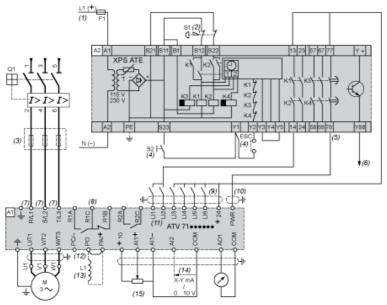


- A1 ATV71 drive
- A2 Preventa XPS ATE safety module for monitoring emergency stops and switches. One safety module can manage the "Power Removal"
- (5) safety function for several drives on the same machine. In this case the time delay must be adjusted on the drive controlling the motor that requires the longest stopping time. In addition, each drive must connect its PWR terminal to its + 24 V via the safety contacts on the XPS ATE module. These contacts are independent for each drive.
- F1 Fuse
- L1 DC choke
- Q1 Circuit-breaker
- S1 Emergency stop button with 2 N/C contacts
- S2 Run button
- (1) Power supply: 24 Vdc or Vac, 115 Vac, 230 Vac.
- (2) Requests controlled stopping of the movement and activates the "Power Removal" safety function.
- (3) Line choke (three-phase), mandatory for ATV71HC11Y...HC63Y drives (except when a special transformer is used (12-pulse)).
- (4) S2: resets XPS ATE module on power-up or after an emergency stop. ESC can be used to set external starting conditions.
  (5) For stopping times requiring more than 30 seconds in category 1, use a Preventa XPS AV safety module which can provide a maximum time delay of 300 seconds.
- (6) The logic output can be used to signal that the machine is in a safe state.
- (7) For ATV71HC40N4 drives combined with a 400 kW motor, ATV71HC50N4 and ATV71HC40Y...HC63Y, refer to the power terminal connections diagram.
- (8) Fault relay contacts. Used for remote signalling of the drive status.
- (9) Connection of the common for the logic inputs depends on the positioning of the SW1 switch. The above diagram shows the internal power supply switched to the "source" position (for other connection types, refer to the user guide).
- (10) Standardized coaxial cable, type RG174/U according to MIL-C17 or KX3B according to NF C 93-550, external diameter 2.54 mm/0.09 in., maximum length 15 m/49.21 ft. The cable shielding must be earthed.
- (11) Logic inputs L11 and L12 must be assigned to the direction of rotation: L11 in the forward direction and L12 in the reverse direction.
- (12) There is no PO terminal on ATV71HC11Y...HC63Y drives.
- (13) Optional DC choke for ATV71H•••M3, ATV71HD11M3X...HD45M3X, ATV71•075N4...•D75N4 and ATV71P•••N4Z drives. Connected in place of the strap between the PO and PA/+ terminals. For ATV71HD55M3X, HD75M3X, ATV71HD90N4...HC50N4 drives, the choke is supplied with the drive; the customer is responsible for connecting it.
- (14) Software-configurable current (0...20 mA) or voltage (0...10 V) analog input.
- (15) Reference potentiometer.

All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc.

Wiring Diagram Conforming to Standards EN 954-1 Category 3, IEC/EN 61508 Capacity SIL2, in Stopping Category 1 According to IEC/EN 60204-1

#### Power Section for Single-Phase Power Supply

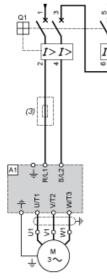

A1 ATV71 drive


Q1 Circuit-breaker

(3) Line Choke (single-phase); mandatory for ATV71HU40M3...HU75M3 drives with a 200...240 V 50/60 Hz single-phase power supply. All terminals are located at the bottom of the drive. Fit interference suppressors on all inductive circuits near the drive or connected on the same circuit, such as relays, contactors, solenoid valves, fluorescent lighting, etc. Product data sheet **Performance Curves** 

## ATV71HU75M3

#### **Derating Curves**

The derating curves for the drive nominal current (In) depend on the temperature, the switching frequency and the mounting type. For intermediate temperatures (e.g. 55°C), interpolate between 2 curves.

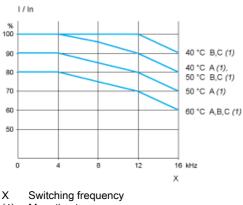

(1) Mounting type